


# Board Layout Driver CATWEAZLE LCII

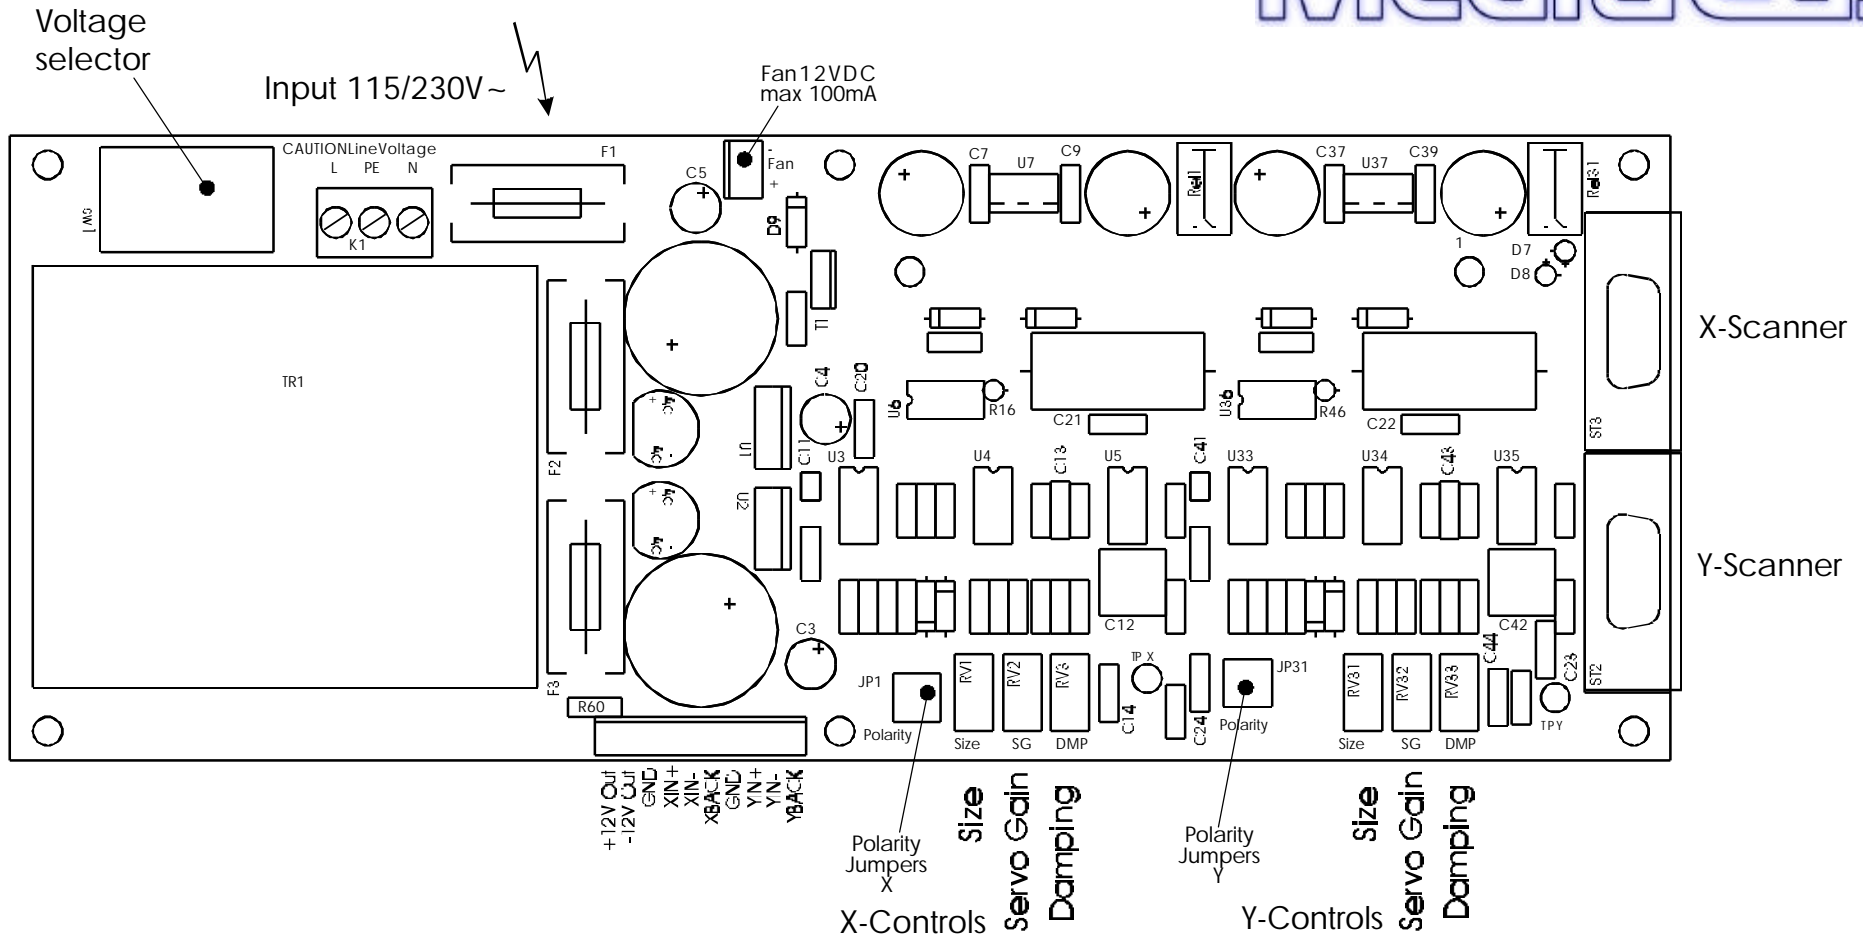

If driving with single-ended (unsymmetrical) input signals, connect XIN- and YIN- to GND.

+12V, -12V, XBACK and YBACK for special applications. Leave unconnected!  
For measurements, use TPX and TPY.

Keep +12V and -12V free from noise influence!

Max. suggested laser power: 2W. No warranty on burn-ins.  
Attention ! Switch on CATWEAZLE before laser!!!

Polarity Jumpers:

- Normal
- Inverted

Clockwise tuning of controls increases SIZE, Servo Gain or Damping