Scanner safety board

CAT-SAFE

How to connect

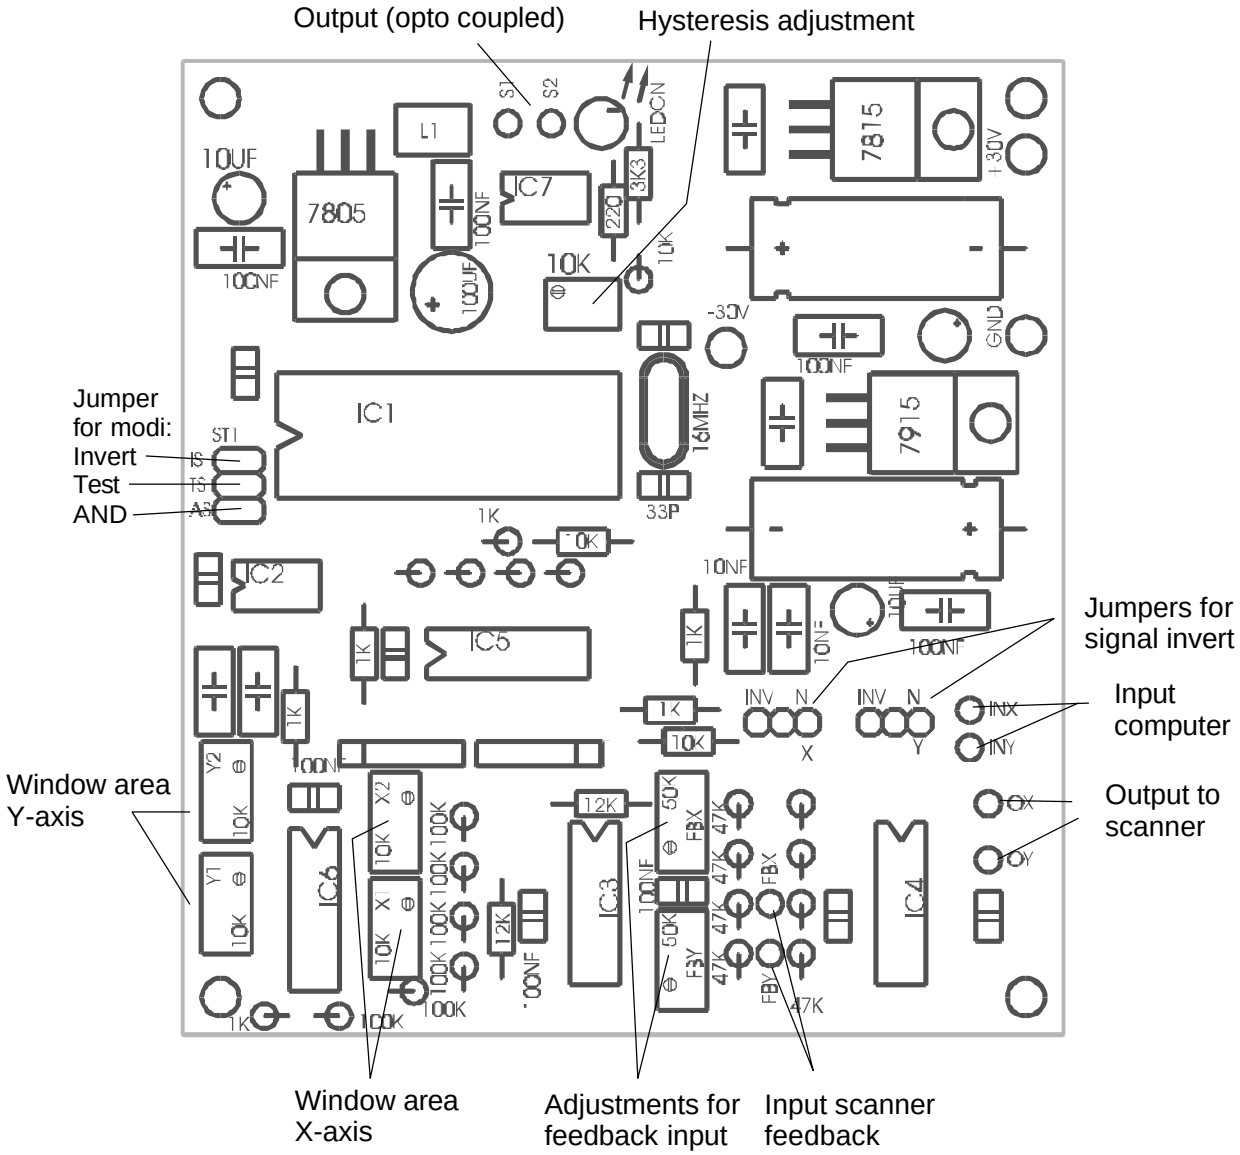

Tips and hints:

- Connect as described. Adjust feedback input to same level as computer input.
- Connect blanking output of computer to S1.
- Connect blanking input of PCAOM to S2
- Window areas are preadjusted to full screen safety.
- Project small horizontal line with computer. Size should be at unsafe condition.
- Adjust hysteresis until line disappears. Increase size of line. Line should come up again.
- Inputs should not be inverted against each other.